



MPAP-200
RS-422/485 PCMCIA
SYNCHRONOUS ADAPTER

for PCMCIA Card Standard compatible machines

User's Manual

QUATECH, INC.
5675 Hudson Industrial Parkway
Hudson, Ohio 44236

TEL: (330) 655-9000
FAX: (330) 655-9010
www.quatech.com

Copyright 2001 Quatech, Inc.

NOTICE

The information contained in this document is protected by copyright, and cannot be reproduced in any form without the written consent of Quatech, Inc. Likewise, any software programs that might accompany this document are protected by copyright and can be used only in accordance with any license agreement(s) between the purchaser and Quatech, Inc. Quatech, Inc. reserves the right to change this documentation or the product to which it refers at any time and without notice.

The authors have taken due care in the preparation of this document and every attempt has been made to ensure its accuracy and completeness. In no event will Quatech, Inc. be liable for damages of any kind, incidental or consequential, in regard to or arising out of the performance or form of the materials presented in this document or any software programs that might accompany this document.

Quatech, Inc. encourages feedback about this document. Please send any written comments to the Technical Support department at the address listed on the cover page of this document.

WARRANTY INFORMATION

Quatech Inc. warrants the **MPAP-200** to be free of defects for **five (5) years** from the date of purchase. Quatech Inc. will repair or replace any board that fails to perform under normal operating conditions and in accordance with the procedures outlined in this document during the warranty period. Any damage that results from improper installation, operation, or general misuse voids all warranty rights.

Although every attempt has been made to guarantee the accuracy of this manual, Quatech Inc. assumes no liability for damages resulting from errors in this document. Quatech Inc. reserves the right to edit or append to this document at any time without notice.

Please complete the following information and retain for your records. Have this information available when requesting warranty service.

DATE OF PURCHASE:

MODEL NUMBER: **MPAP-200**

PRODUCT DESCRIPTION: **Single Channel PCMCIA RS-422/485
Synchronous Communications
Adapter**

SERIAL NUMBER:

1 Introduction	7
1.1 System Requirements	7
2 Hardware Installation	8
3 DOS / Windows 3.x Software Installation	9

3.1 MPAP-200 Client Driver for DOS	11
3.1.1 Hot Swapping	11
3.1.2 DOS client driver installation	11
3.1.3 Auto Fallback configuration	12
3.2 DOS Client Driver examples	12
3.3 MPAP-200 Enabler for DOS	14
3.3.1 Hot Swapping is not supported	14
3.3.2 DOS Enabler Installation	14
3.3.3 Configuring a card	14
3.3.4 Releasing a card's configuration	16
3.4 DOS Enabler Examples	17
4 Windows 95/98 Installation	18
4.3 Configuration Options	22
5 OS/2 Software Installation	23
5.1 System Requirements	23
5.2 OS/2 Client Driver Installation	23
5.2.1 Tying a configuration to a particular socket	24
5.2.2 Auto Fallback configuration	24
5.2.3 Hot Swapping	24
5.3 OS/2 Client Driver Configuration Examples	25
5.4 Monitoring The Status Of PCMCIA Cards	25
5.5 Installing OS/2 PCMCIA Support	26
6 Using the MPAP-200 with Syncdrive	27
7 Addressing	28
8 Interrupts	29
9 SCC General Information	30
9.1 Accessing the registers	31
9.2 Baud Rate Generator Programming	34
9.3 SCC Data Encoding Methods	34
9.4 Support for SCC Channel B	35
9.4.1 Receive data and clock signals	35
9.4.2 Extra clock support for channel A	35
9.4.3 Extra handshaking for channel A	35
9.4.4 Other signals are not used	35
9.5 SCC Incompatibility Warnings	36
9.5.1 Register Pointer Bits	36
9.5.2 Software Interrupt Acknowledge	36
10 FIFO Operation	37
10.1 Enabling and disabling the FIFOs	37

10.2 Accessing the FIFOs	37
10.2.1 Transmit FIFO	37
10.2.2 Receive FIFO	38
10.3 SCC configuration for FIFO operation	38
10.3.1 Using channel A for both transmit and receive	39
10.3.2 Using channel B for receive	40
10.4 FIFO status and control	41
10.4.1 Interrupt status	41
10.4.2 Resetting the FIFOs	42
10.4.3 Reading current FIFO status	42
10.4.4 Controlling the FIFOs	42
10.5 Accessing the SCC while FIFOs are enabled	42
10.6 Receive pattern detection	43
10.7 Receive FIFO timeout	44
11 Communications Register	45
12 Configuration Register	47
13 Interrupt Status Register	49
14 FIFO Status Register	50
15 FIFO Control Register	51
16 Receive Pattern Character Register	52
17 Receive Pattern Count Register	53
18 Receive FIFO Timeout Register	54
19 External Connections	55
19.1 SYNCA (pin 21)	56
19.2 MPA-200 and EIA-530 Compatibility	56
19.3 Null-modem cables	57
20 DTE Interface Signals	58
21 Specifications	60
22 Software Troubleshooting	61
22.1 DOS Client Driver	61
22.1.1 Generic "SuperClient" Drivers	61
22.1.2 Lack of Available Resources	61
22.1.3 Multiple Configuration Attempts	61
22.1.4 Older Versions of Card and Socket Services	61
22.2 DOS Enabler	62
22.2.1 With Card and Socket Services	62
22.2.2 Socket Numbers	62
22.2.3 Memory range exclusion	62
22.3 OS/2 Client Driver	62

22.3.1 Resources Not Available	62
22.3.2 Insufficient Number Of Command Line Arguments	62
22.3.3 Bad Parameters	63

1 Introduction

The Quatech MPAP-200/300 is a PCMCIA Type II (5 mm) card and is PCMCIA PC Card Standard Specification 2.1 compliant. It provides a single-channel RS-422/485 synchronous communication port. The base address and IRQ are configured through the PCMCIA hardware and software using utility programs provided by Quatech. There are no switches or jumpers to set.

The MPAP-200/300 uses a Zilog 85230-compatible Serial Communications Controller (SCC). The SCC can support asynchronous formats, byte-oriented synchronous protocols such as IBM Bisync, and bit-oriented synchronous protocols such as HDLC and SDLC. The SCC also offers internal functions such as on-chip baud rate generators, and digital phase-lock loop (DPLL) for recovering data clocking from received data streams.

Because the PCMCIA 2.1 standard does not include a direct memory access (DMA) interface, the MPAP-200/300 supports only interrupt-driven communications. To compensate for the lack of DMA, the MPAP-200/300 is equipped with 1024-byte FIFOs for transmit and receive data. The FIFOs provide for high data throughput with very low interrupt overhead.

Hereafter, the MPAP-200/300 will be referred to as the MPAP-200.

1.1 System Requirements

- 16 bytes of contiguous I/O address space
- one hardware interrupt (IRQ)
- One available PCMCIA Type II socket

2 Hardware Installation

Hardware installation for the MPAP-200 is a very simple process:

1. Insert the MPAP-200 into a vacant PCMCIA Type II adapter socket.
2. If PCMCIA Card and Socket Services and a Quatech MPAP-200 Client Driver are installed, the MPAP-200 will be configured for use automatically. Under DOS, it is also possible to use the Quatech MPAP-200 enabler program. (Software installation and configuration is covered in other chapters of this manual.)
3. Attach the narrow connector on the supplied cable to the socket on the end of the MPAP-200. The connector is keyed so that it can only be inserted in one orientation. The connector should attach firmly and smoothly. **Do not force the connector into the socket!**
4. Attach the male DB-25 connector on the supplied cable to the external equipment in use.

3 DOS / Windows 3.x Software Installation

Two DOS configuration software programs are provided with the MPAP-200: a client driver and a card enabler. These programs are executed from DOS (before entering Windows) and allow operation of the MPAP-200 in both the DOS and Windows 3.x environments. Table 1 highlights the differences between these programs.

	Client Driver	Enabler
File name	MPAP2CL.SYS	MPAP2EN.EXE
File type	DOS device driver	DOS executable
Interfaces to	PCMCIA card and Socket Services (socket-independent)	socket controller (Intel 82365 or compatible only)
Automatic configuration of MPAP-200 upon insertion (Hot Swapping)	yes	no
PCMCIA Card and Socket Services software required	yes	no
Recommendation	Best for most users.	Use if Card and Socket Services software is not available and the system has an Intel 82365 or compatible socket controller.

Table 1 --- Client driver versus enabler for DOS/Windows 3.x.

IMPORTANT

Do not use both the client driver and the enabler!

If you are unsure whether Card and Socket Services software is currently installed on your system, install the client driver. When loaded, the client driver will display an error message if Card and Socket Services software is not detected. If you receive such an error message, remove the client driver software and install the enabler instead.

3.1 MPAP-200 Client Driver for DOS

In order to use the MPAP-200 client driver, the system must be configured with Card and Socket Services software. Card and Socket Services software is not provided with the MPAP-200 but is available from Quatech.

3.1.1 Hot Swapping

The client driver supports "hot swapping." After installation, it is not necessary for the MPAP-200 to be inserted in the PCMCIA socket at boot time. When the card is inserted, it will be configured according to the command line options. When the card is removed, the resources it used will be made available for other devices.

If the MPAP-200 is in a socket at boot time, the client driver will display a message indicating whether the card can be successfully configured and what resources will be used. This is helpful if the user allows Card Services to select resources instead of specifying them on the command line.

3.1.2 DOS client driver installation

The MPAP-200 client driver accepts between zero and eight sets of desired configurations from the user on the command line. When an MPAP-200 is inserted, desired configurations are tried in the order they appear on the command line from left to right. If the user does not provide any desired configurations, the client driver will ask Card Services to automatically determine a configuration for the card.

Each desired configuration must be enclosed in parentheses and must be separated from other desired configurations by a space on the command line. Within each desired configuration, parameters are separated using commas (no spaces). In the descriptions below, replace the '#' symbols with the appropriate numeric values.

1. Copy the file MPAP2CL.SYS from the MPAP-200 distribution diskette onto the system's hard drive.
2. Using an ASCII text editor, open the system's CONFIG.SYS file located in the root directory of the boot drive.
3. Locate the line(s) in the CONFIG.SYS file where the Card and Socket Services software is installed.
4. BELOW the line(s) installing the Card and Socket Services software, add the following line to the CONFIG.SYS file:

DEVICE=drive:\path\MPAP2CL.SYS (S#,B#,I#) ... (S#,B#,I#)

where **drive:\path** specifies the drive letter and directory to which you copied the client driver file, and **(S#,B#,I#) ... (S#,B#,I#)** stand for a variable number of desired configurations. The configuration parameters are described below.

- S#** The PCMCIA socket into which the MPAP-200 must be inserted for this configuration to be used. This value is a decimal number ranging from 0 to 15. If this parameter is not used, the configuration can apply to any socket.
- B#** The base I/O address of the MPAP-200. This number must be a three-digit hexadecimal value ending in 0. If this parameter is omitted, a base address will be assigned by Card Services.
- I#** The interrupt level (IRQ) of the MPAP-200. This decimal number must be one of the following values: 3, 4, 5, 7, 9, 10, 11, 12, 14, 15, or 0 if no IRQ is desired. If this parameter is omitted, an interrupt level will be assigned by Card Services.

5. Save the CONFIG.SYS file and exit the text editor.
6. Insert an MPAP-200 card in a PCMCIA socket, and reboot the computer. (If a card is present in a socket at boot time, the card's configuration is reported on the screen as the client driver loads. This feature can be used to verify the changes just made to the CONFIG.SYS file.)
7. If the Client Driver reports the desired configuration, the installation process is complete and the MPAP-200 may be removed from the system if desired.
8. If configuration of the card fails, the client driver will display an error message. If "Invalid command line option" is displayed, correct the entry in the CONFIG.SYS file and reboot the computer again. If "Card and Socket Services not found" is displayed, install Card and Socket Services on the system or use the enabler program instead of the client driver.

3.1.3 Auto Fallback configuration

The client driver can be instructed to try desired configurations first but fallback to allowing Card Services to determine a configuration if none of the desired configurations are available. This is done by adding a null configuration "()" to the end of the command line.

3.2 DOS Client Driver examples

Example: Attempt to configure an MPAP-200 inserted into any socket with a base address and IRQ automatically assigned by Card Services.

DEVICE=C:\MPAP-200\MPAP2CL.SYS

Example: Attempt to configure an MPAP-200 inserted into any socket with a base address of 300 hex and an IRQ assigned by Card Services. If address 300 hex is unavailable, the card will not be configured.

DEVICE=C:\MPAP-200\MPAP2CL.SYS (b300)

Example: Attempt to configure an MPAP-200 inserted into socket 0 with a base address of 300 hex and IRQ 5. If address 300 hex or IRQ 5 is unavailable, the card will not be configured. In addition, if an MPAP-200 is inserted into any other socket, it will not be configured.

DEVICE=C:\MPAP-200\MPAP2CL.SYS (s0,b300,i5)

Example: Attempt to configure an MPAP-200 inserted into any socket with a base address of 300 hex and IRQ 5. If address 300 hex or IRQ 5 is unavailable, attempt to configure the card with a base address assigned by Card Services and IRQ 10. If IRQ 10 is also unavailable, attempt to configure the card with a base address and an IRQ assigned by Card and Socket Services.

DEVICE=C:\MPAP-200\MPAP2CL.SYS (b300,i5) (i10) ()

Example: Attempt to configure an MPAP-200 inserted into socket 0 with a base address of 300 hex and IRQ 5. Attempt to configure an MPAP-200 inserted into socket 1 with a base address of 340 hex and IRQ 10. This type of configuration may be desirable in systems where more than one MPAP-200 is to be installed. It allows the user to force the MPAP-200 address and IRQ settings to be socket-specific which may simplify cable connections and software development.

DEVICE=C:\MPAP-200\MPAP2CL.SYS (s0,b300,i5) (s1,b340,i10)

3.3 MPAP-200 Enabler for DOS

For systems that are not using PCMCIA Card and Socket Services software, the MPAP-200 DOS enabler may be used to enable and configure the card. The enabler will operate on any DOS system using an Intel 82365SL (PCIC) or PCIC-compatible PCMCIA socket adapter including the Cirrus Logic CL-PD6710/6720, the VLSI VL82C146, and the Vadem VG-365 among others.

IMPORTANT

The enabler can be used ONLY if Card and Socket Services is NOT installed on the system!

3.3.1 Hot Swapping is not supported

The MPAP-200 enabler does not support automatic configuration of adapters upon insertion, commonly referred to as "Hot Swapping". The enabler must be executed after insertion of an MPAP-200 card. If more than one MPAP-200 is installed in a system, the enabler must be executed separately for each card. A card that is removed and reinserted must be reconfigured by executing the enabler again.

3.3.2 DOS Enabler Installation

To install the DOS enabler program, copy the file MPAP2EN.EXE from the MPAP-200 distribution diskette onto the system's hard drive. No setup steps are required.

IMPORTANT

The enabler requires a region of high DOS memory when configuring an MPAP-200. This region is 1000H bytes (4KB) long and by default begins at address D0000H (the default address may be changed using the "W" option). If a memory manager such as EMM386, QEMM, or 386Max is installed on the system, this region of DOS memory must be excluded from the memory manager's control. Consult the documentation provided with the memory manager software for instructions on how to exclude this memory region.

3.3.3 Configuring a card

The enabler requires a single desired configuration to be provided on the command line. The card will not be configured if the desired configuration is not provided. The desired configuration must be enclosed in parentheses and it contains parameters separated using commas (no spaces). In the descriptions below, replace the '#' symbols with the appropriate numeric values.

MPAP1EN (S#,B#,I#,W#)

- S#** The PCMCIA socket into which the MPAP-200 will be inserted. This value is a decimal number ranging from 0 to 15. This parameter is always required when configuring a card.
- B#** The base I/O address of the MPAP-200. This number must be a three-digit hexadecimal value ending in 0. This parameter is always required when configuring a card.
- I#** The interrupt level (IRQ) of the MPAP-200. This decimal number must be one of the following values: 3, 4, 5, 7, 9, 10, 11, 12, 14, 15, or 0 if no IRQ is desired. This parameter is always required when configuring a card.
- W#** **(optional)** The base address of the memory window used by the enabler. This two-digit hexadecimal number can be one of the following values: C8, CC, D0 (default), D4, D8, or DC. Use D4 for a memory window at segment D400, D8 for a memory window at segment D800, etc. If this parameter is omitted, the default setting of D000 will be used.

If configuration is successful, the enabler will display a message showing the configuration on the screen. If the MPAP-200 is not successfully configured, then the information in this section along with the Troubleshooting chapter of this manual should be consulted to determine the cause of the problem.

3.3.4 Releasing a card's configuration

Before removing a MPAP-200 from its PCMCIA socket, the enabler should be executed again to free the system resources allocated when the card was installed. Use the 'R' parameter to do this.

MPAP1EN (S#,R,W#)

- S# The PCMCIA socket into which the MPAP-200 will be inserted. This value is a decimal number ranging from 0 to 15. This parameter is always required when releasing a card's configuration.
- R Release the resources previously allocated to the MPAP-200. This parameter is always required when releasing a card's configuration. This option must not be used when configuring an MPAP-200.
- W# **(optional)** The base address of the memory window used by the enabler. This two-digit hexadecimal number can be one of the following values: C8, CC, D0 (default), D4, D8, or DC. Use D4 for a memory window at segment D400, D8 for a memory window at segment D800, etc. If this parameter is omitted, the default setting of D000 will be used.

3.4 DOS Enabler Examples

Example: Configure the MPAP-200 in socket 0 with a base address of 300H and IRQ 5.

MPAP2EN.EXE (s0,b300,i5)

Example: Configure the MPAP-200 in socket 1 with a base address of 300H and IRQ 3 using a configuration memory window at segment D800.

MPAP2EN.EXE (s1,b300,i3,wd8)

Example: Release the configuration used by the MPAP-200 in socket 0.

MPAP2EN.EXE (s0,r)

Example: Release the configuration used by the MPAP-200 in socket 1 using a configuration memory window at segment CC00.

MPAP2EN.EXE (s1,r,wcc)

4 Windows 95/98 Installation

Windows 95/98 maintains a registry of all known hardware installed in your computer. Inside this hardware registry Windows keeps track of all of your system resources, such as I/O locations, IRQ levels, and DMA channels. The "Add New Hardware Wizard" utility was designed to add new hardware and update this registry.

An "INF" configuration file is included with the MPAP-200 to allow easy configuration in the Windows 95/98 environment. Windows uses the "INF" file to determine the system resources required by the MPAP-200, searches for available resources to fill the boards requirements, and then updates the hardware registry with an entry that allocates these resources. The Syncdrive DLL and VxD can then be used to access the card.

4.1 Using the "Add New Hardware" Wizard

The following instructions provide step-by-step instructions on installing the MPAP-200 in Windows 98 using the "Add New Hardware" wizard. Windows 95 uses a similar process to load the INF file from a floppy disk with slightly different dialog boxes.

1. After inserting an MPAP-200 for the first time, the "Add New Hardware" wizard will start. Click the "Next" button.




2. Click the "Next" button. Select the radio button for "Search for the best driver for your device." Click the "Next" button to continue.



3. On the next dialog, select the "CD-ROM drive" checkbox. Insert the Quatech COM CD (shipped with the card) into the CD drive. Click the "Next" button.



4. Windows should locate the INF file on the CD and display a dialog that looks like this. Click the "Next" button.

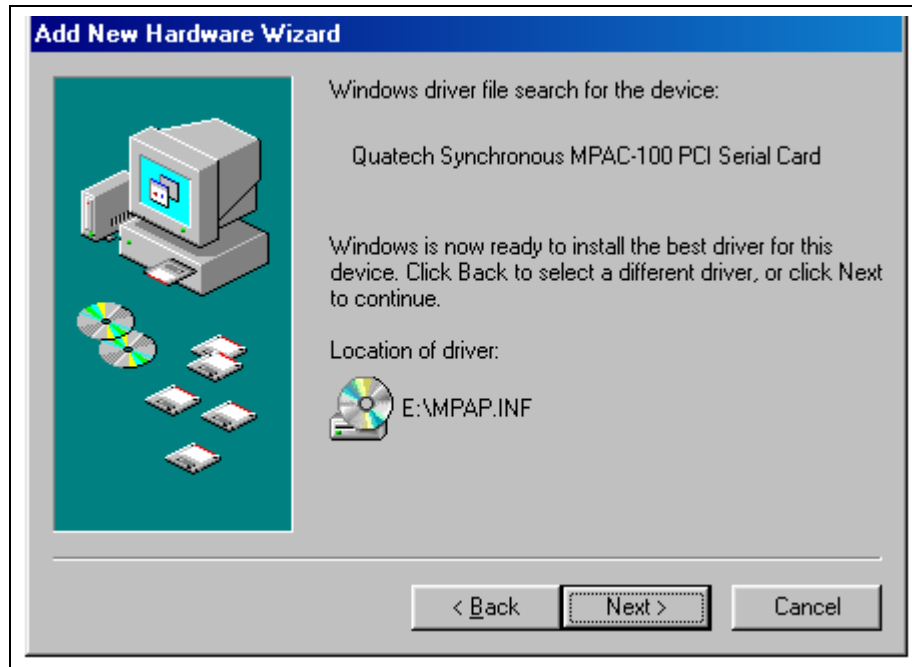


5. Windows will copy the INF file from the CD and display a final dialog indicating that the process is complete. Click the "Finish" button.



4.2 Viewing Resources with Device Manager


The following instructions provide step-by-step instructions on viewing resources used by the MPAP-200 in Windows 95/98 using the "Device Manager" utility.

1. Double click the "System" icon inside the Control Panel folder. This opens up the System Properties box.
2. Click the "Device Manager" tab located along the top of the System Properties box. This lists all hardware devices registered inside the Windows registry. Additional information is available on any of these devices by click on the device name and then selecting the "Properties" button.
3. Double click the device group "Synchronous_Communication". The MPAP-200 model name should appear in the list of adapters.

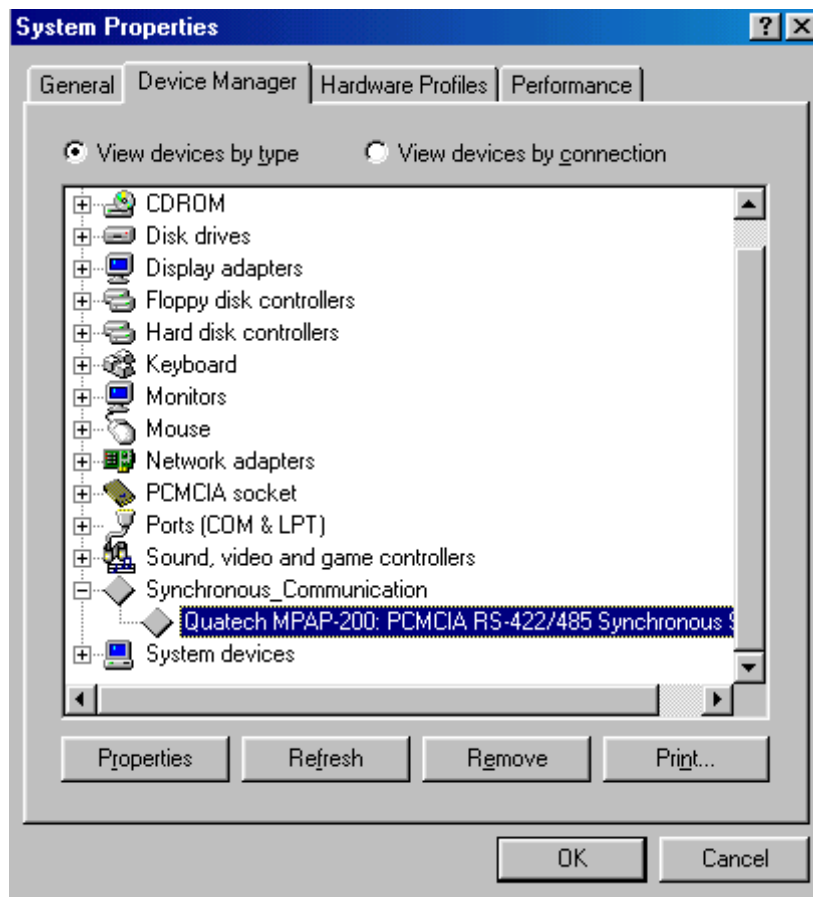

4. Double click the MPAP-200 model name and a properties box should open for the hardware adapter.
5. Click the "Resources" tab located along the top of the properties box to view the resources Windows has allocated for the MPAP-200 match the hardware configuration.

Click "Cancel" to exit without making changes.

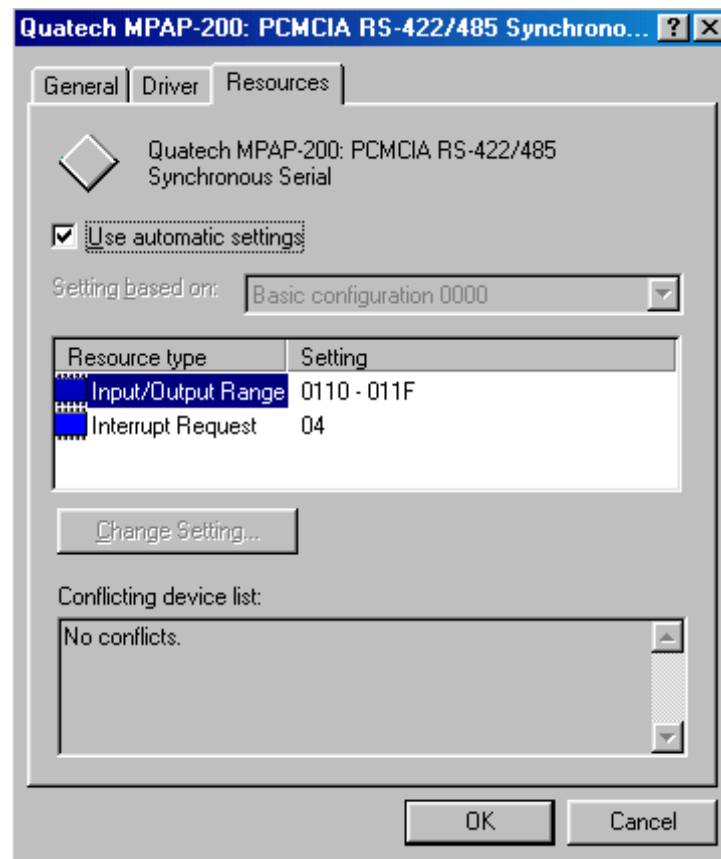

6. If changes to the automatic configuration are necessary for compatibility with existing programs, uncheck the "Use Automatic Settings" box and double-click on the Resource Type that needs to be changed. Caution should be used to avoid creating device conflicts with other hardware in the system.

4.3 Configuration Options

If the "Use Automatic Settings" box is unchecked, various options can be enabled by selecting a different basic configuration in the "Setting based on" drop down box. (Revision B5 hardware and later only.)

- 0000 Factory default. Suggested for nearly all customers.
- 0001 Reserved. DO NOT USE!
- 0002 Memory-mapped mode with no IRQ. Not suggested for use.

5 OS/2 Software Installation

An OS/2 client driver is provided with the MPAP-200. This client driver works with OS/2's Card and Socket Services to allow operation of the MPAP-200 under OS/2.

5.1 System Requirements

- OS/2 2.1 or later.
- OS/2 PCMCIA Card and Socket Services support must be installed. See "Installing OS/2 PCMCIA support" below if you do not already have this support installed.

5.2 OS/2 Client Driver Installation

The MPAP-200 OS/2 client driver requires desired configurations from the user on the command line. If no desired configurations are provided by the user, the client driver will NOT ask Card Services to attempt to determine a hardware configuration for the card.

The client driver will attempt to configure an MPAP-200 with the first available configuration listed from left to right on the command line. Each desired configuration must be enclosed in parentheses and must be separated from other desired configurations by a space on the command line. Within each desired configuration, the parameters are separated using commas (no spaces).

1. Copy the MPAP200.SYS client driver file from the distribution disk to any convenient directory on the hard disk.
2. Open the CONFIG.SYS file using any ASCII text editor.
3. Add the following line to the CONFIG.SYS file:

DEVICE=*drive:\path*\MPAP200.SYS (addr,irq) ... (addr,irq)

where ***drive:\path*** specifies the drive letter and directory to which you copied the client driver file, and **(addr,irq) ... (addr,irq)** stand for a variable number of desired configurations. The configuration parameters are described below.

addr **(required)** The base I/O address of the MPAP-200. This number must be a three-digit hexadecimal value ending in 0.

irq **(required)** The interrupt level (IRQ) of the MPAP-200. This decimal number must be one of the following values: 3, 4, 5, 7, 9, 10, 11, 12, 14, 15, or 0 if no IRQ is desired.

4. Save the CONFIG.SYS file, exit the text editor, shutdown the system, and reboot to activate the changes.

5.2.1 Tying a configuration to a particular socket

A configuration can be made specific to a socket by appending "=Sx" after the closing parenthesis, where "X" is the desired socket number.

5.2.2 Auto Fallback configuration

OS/2 Card Services is capable of automatically determining a configuration for a PCMCIA device, but due to limitations in Quatech's "Syncdrive" driver software, the client driver does not support this feature. This support is planned for a future release of both the client driver and Syncdrive.

5.2.3 Hot Swapping

The client driver supports "hot swapping." After installation, it is not necessary for the MPAP-200 to be inserted in the PCMCIA socket at boot time. When the card is inserted, it will be configured according to the command line options. When the card is removed, the resources it used will be made available for other devices.

5.3 OS/2 Client Driver Configuration Examples

Example: Configure the MPAP-200 at base address 300 hex and IRQ 5. Configuration will fail if any of these resources are already in use. Only one MPAP-200 can be used.

DEVICE=C:\MPAP-200\MPAP200.SYS (300,5)

Example: Configure the MPAP-200 at base address 300 hex and IRQ 5. Configuration will fail if any of these resources are already in use. Only one MPAP-200 can be used.

DEVICE=C:\MPAP-200\MPAP200.SYS (300,5)

Example: Configure the MPAP-200 at base address 300 hex and IRQ 5. If any of these resources are not available, the second choice is to configure the MPAP-200 at base address 110 hex and IRQ 15. Up to two MPAP-200s can be used.

DEVICE=C:\MPAP-200\MPAP200.SYS (300,5) (110,15)

Example: If an MPAP-200 is inserted into socket 1, configure it at base address 300 hex and IRQ 5. If any of these resources are not available, the card will not be configured. If an MPAP-200 is inserted into socket 2, configure it at base address 110 hex and IRQ 15. If any of these resources are not available, the card will not be configured. Up to two MPAP-200s can be used.

DEVICE=C:\MPAP-200\MPAP200.SYS (300,5)=S1 (110,15)=S2

5.4 Monitoring The Status Of PCMCIA Cards

OS/2 Warp provides a utility called "Plug and Play for PCMCIA" that can be used to monitor the status of each PCMCIA socket. In OS/2 2.1, this utility is called "Configuration Manager". Under OS/2 Warp 4.0, when an MPAP-200 is inserted, the Card Type for the appropriate socket will display "I/O." Clicking on the "Card" icon brings up a dialog where the name displayed for the card can be changed to "Quatech MPAP-200" or any other desired name.

Under releases of OS/2 older than Warp 4.0, the default Card Type displayed may not read "I/O," but the card should be configured properly by the client driver.

If the card is successfully configured, the Card Status will display "Ready". If the card cannot be configured, the Card Status will be "Not Ready". You can view the resources claimed by a configured card by double-clicking on that card's line or status icon.

5.5 Installing OS/2 PCMCIA Support

If PCMCIA support was not selected when OS/2 was installed, add it by using the Selective Install facility in the System Setup folder. Full PCMCIA support is built into OS/2 Warp 3.0 and later. On OS/2 2.1 and 2.11, PCMCIA Card Services is built in, but you must add Socket Services separately. The necessary files can be found on CompuServe in the OS2SUPPORT forum library 23 in the file OS2PCM.ZIP, and may be available elsewhere. Quatech does not distribute these files.

6 Using the MPAP-200 with Syncdrive

Syncdrive is a synchronous communications software driver package designed to aid users of Quatech synchronous communication hardware in the development of their application software. Syncdrive is included free of charge with all Quatech MPA-series synchronous communication products. The MPAP-200 is backward-compatible with software written for Quatech ISA-bus synchronous adapters and it operates with Syncdrive.

Syncdrive, however, is not aware of the plug-and-play nature of PCMCIA cards. A Syncdrive application will expect to see the MPAP-200 at a specific base address and a specific IRQ. When using Syncdrive with PCMCIA cards, it is necessary to obtain the base address and IRQ assigned to the card by the PCMCIA Card Services and provide those values in the channel configuration array.

For DOS, Windows 3.1, or OS/2, the client driver or enabler supplied with the card must be used to configure the MPAP-200 with the settings expected by the Syncdrive application before the application tries to use the card.

Under Windows 95/98, the card is automatically configured. To find the settings, click the right mouse button on the My Computer icon and select Properties. Select the Device Manager tab and double-click the card's entry under the "Synchronous Communication" section. Select the Resources tab to see the card's base address and IRQ. Use these settings with the Syncdrive application. Windows 95/98 may allow changes to the settings if the "Use Automatic Settings" box is unchecked.

Syncdrive does not receive notifications of card insertion or card removal events. Therefore it cannot support hot swapping without the user taking some kind of action to force the Syncdrive application to initialize a newly-inserted card.

A future release of Syncdrive may permit automatic configuration by retrieving hardware settings from the MPAP-200 client driver. For now, the user should consider the client driver to be a replacement for jumper settings; it sets the card in a predetermined configuration before the Syncdrive application is started.

7 Addressing

The MPAP-200 occupies a continuous 16-byte block of I/O addresses. For example, if the base address is set to 300 hex, then the MPAP-200 will occupy address locations 300 hex to 30F hex. If the computer in which the MPAP-200 is installed is running PCMCIA Card and Socket Services, the base address is set by the client driver. If PCMCIA Card and Socket Services are not being used, the base address is set by the MPAP-200 enabler program.

The first four bytes of address space on the MPAP-200 contain the internal registers of the SCC. Other Quatech architecture-specific registers occupy eight more bytes. The remainder of the address space is reserved for future use. The MPAP-200 address map is shown in Table 2.

Address	Register Description
Base + 0	SCC Data Port, Channel A
Base + 1	SCC Control Port, Channel A
Base + 2	SCC Data Port, Channel B
Base + 3	SCC Control Port, Channel B
Base + 4	Communications Register
Base + 5	Configuration Register
Base + 6	Reserved
Base + 7	Reserved
Base + 8	Interrupt Status Register
Base + 9	FIFO Status Register
Base + A	FIFO Control Register
Base + B	Receive Pattern Character Register
Base + C	Receive Pattern Count Register
Base + D	Receive FIFO Timeout Register
Base + E	Reserved
Base + F	Reserved

Table 2 --- MPAP-200 Address Assignments

Information on the internal registers of the SCC can be found in Table 3 and Table 4 and in the technical reference manuals available from Zilog. The other onboard registers are fully described in subsequent chapters of this manual.

8 Interrupts

The MPAP-200 will operate using the interrupt level (IRQ) assigned by the PCMCIA system. Interrupts can come from the SCC or the external FIFOs.

When using interrupts with the MPAP-200, the application must have an interrupt service routine (ISR). There are several things that an ISR must do to allow proper system operation:

1. If the external FIFOs are enabled, read the Interrupt Status Register (see page 38) to determine whether the interrupt was caused by a FIFO event or by the SCC.
2. If the TX_FIFO bit is set, at least 512 bytes can be written to the Tx FIFO. If the RX_FIFO bit is set, at least 512 bytes can be read from the Rx FIFO. I/O block move instructions may be useful. Check the FIFO Status Register (see page 40) after servicing the FIFO(s) to see if further FIFO service is required.
3. If the SCC bit is set, do an SCC software interrupt acknowledge by reading Read Register 2 in channel B of the SCC. The value read can also be used to vector to the appropriate part of the ISR.
4. Service the SCC interrupt by reading the receiver buffer, writing to the transmit buffer, issuing commands to the SCC, etc.
5. Write a Reset Highest Interrupt Under Service (IUS) command to the SCC by writing 0x38 to Write Register 0.
6. Check for other interrupts pending in the SCC by reading Read Register 3. Perform further interrupt servicing if necessary.
7. For applications running under DOS, a nonspecific End of Interrupt must be submitted to the interrupt controller. For Interrupts 2-7 this is done by writing a 0x20 to port 0x20. For Interrupts 10-12, 14 and 15 this is done by writing a 0x20 to port 0x60, then a 0x20 to port 0x20 (due to the interrupt controllers being cascaded). Device drivers running under other operating systems may have varying requirements concerning the End of Interrupt command.

For further information on these subjects or any others involving the SCC contact Zilog for a complete technical manual.

9 SCC General Information

The Serial Communications Controller (SCC) is a dual channel, multi-protocol data communications peripheral. The MPAP-200 provides a single channel for communications, however, portions of the second channel can be utilized to support some special circumstances. The SCC can be configured to satisfy a wide variety of serial communications applications. Some of its protocol capabilities include:

SDLC/HDLC (Bit Synchronous) Communications

- Abort sequence generation and checking
- Automatic zero insertion and deletion
- Automatic flag insertion between messages
- Address field recognition
- I-field residue handling
- CRC generation and detection
- SDLC loop mode with EOP recognition/loop entry and exit

Byte-oriented Synchronous Communications

- Internal/external character synchronization
- 1 or 2 sync characters in separate registers
- Automatic Cyclic Redundancy Check (CRC) generation/detection

Asynchronous Communications

- 5, 6, 7, or 8 bits per character
- 1, 1-1/2, or 2 stop bits
- Odd, even, or no parity
- Times 1, 16, 32, or 64 x clock modes
- Break generation and detection
- Parity, overrun and framing error detection

NRZ, NRZI, or FM encoding/decoding

9.1 Accessing the registers

The mode of communication desired is established and monitored through the bit values of the internal read and write registers. The register set of the SCC includes 16 write registers and 9 read registers. These registers only occupy four address locations, which start at the MPAP-200's physical base address that is configured via the on board switches. This and all other addresses are referenced from this base address in the form Base+Offset. An example of this is Base+1 for the SCC Control Port, Channel A.

There are two register locations per SCC channel, a data port and a control port. Accessing the internal SCC registers is a two step process that requires loading a register pointer to perform the addressing to the correct data register. The first step is to write to the control port the operation and address for the appropriate channel. The second step is to either read data from or write data to the control port. The only exception to this rule is when accessing the transmit and receive data buffers. These registers can be accessed with the two step process described or with a single read or write to the data port. The following examples illustrate how to access the internal registers of the SCC. Table 3 on page 20 describes the read registers and Table 4 on page 21 describes the write registers for each channel.

The MPAP-200 has been designed to assure that all back to back access timing requirements of the SCC are met without the need for any software timing control. The standard of adding jmp \$+2 between I/O port accesses is not required when accessing the MPAP-200.

Example 1: Enabling the transmitter on channel A.

```
mov    dx, base      ; load base address
add    dx, ContA     ; add control reg A offset (1)
mov    al, 05H       ; write the register number
out    dx, al
mov    al, 08H       ; write the data to the register
out    dx, al
```

Example 2: Monitoring the status of the transmit and receive buffers in RR0 of Channel A. Register 0 is addressed by default if no register number is written to WR0 first.

```
mov    dx, base      ; load base address
add    dx, ContA     ; add control reg A offset (1)
in     ax, dx         ; read the status
```

Example 3: Write data into the transmit buffer of channel A.

```
mov    dx, base    ; load base address
out    dx, al       ; write data in ax to buffer
```

Example 4: Read data from the receive buffer of channel A.

```
mov    dx, base    ; load base address
in     al, dx       ; write data in ax to buffer
```

RR0	Transmit, Receive buffer statuses and external status
RR1	Special Receive Condition status, residue codes, error conditions
RR2	Modified Channel B interrupt vector and Unmodified Channel A interrupt vector
RR3	Interrupt Pending bits
RR6	LSB of frame byte count register
RR7	MSB of frame byte count and FIFO status register
RR8	Receive buffer
RR10	Miscellaneous status parameters
RR12	Lower byte of baud rate time constant
RR13	Upper byte of baud rate time constant
RR15	External/Status interrupt information

Table 3 --- SCC read register description

The SCC can perform three basic forms of I/O operations: polling, interrupts, and block transfer. Polling transfers data, without interrupts, by reading the status of RR0 and then reading or writing data to the SCC buffers via CPU port accesses. Interrupts on the SCC can be sourced from the receiver, the transmitter, or External/Status conditions. At the event of an interrupt, Status can be determined, then data can be written to or read from the SCC via CPU port accesses. Further information on this subject is found on page 17. For block transfer mode, DMA transfers are used, so this type of operation is not supported on the MPAP-200.

The SCC incorporates additional circuitry supporting serial communications. This circuitry includes clocking options, baud rate generator (BRG), data encoding, and internal loopback. The SCC may be programmed to select one of several sources to provide the transmit and receive clocks. These clocks can be programmed in WR11 to come from the RTXC pin, the TRXC pin, the output of the BRG, or the transmit output of the DPLL. The MPAP-200 uses the TRXC pin for its clock-on-transmit and the RTXC pin for its clock-on-receive. Programming of the clocks should be done before enabling the receiver, transmitter, BRG, or DPLL.

WR0	Command Register, Register Pointer, CRC initialization, and resets for various modes
WR1	Interrupt control, Wait/DMA request control
WR2	Interrupt vector
WR3	Receiver initialization and control
WR4	Transmit/Receive miscellaneous parameters and codes, clock rate, stop bits, parity
WR5	Transmitter initialization and control
WR6	Sync character (1st byte) or SDLC address field
WR7	Sync character (2nd byte) or SDLC Flag
WR7'	Special HDLC Enhancement Register
WR8	Transmit buffer
WR9	Master interrupt control and reset
WR10	Miscellaneous transmitter/receiver control bits, NRZI, NRZ, FM coding, CRC reset
WR11	Clock mode and source control
WR12	Lower byte of baud rate time constant
WR13	Lower byte of baud rate time constant
WR14	Miscellaneous control bits: baud rate generator, DPLL control, auto echo
WR15	External/Status interrupt control

Table 4 --- SCC write register description

For complete information regarding the SCC registers please refer to Zilog's Z85230 technical manual.

9.2 Baud Rate Generator Programming

The baud rate generator (hereafter referred to as the BRG) of the SCC consists of a 16-bit down counter, two 8-bit time constant registers, and an output divide-by-two. The time constant for the BRG is programmed into WR12 (least significant byte) and WR13 (most significant byte). The equation relating the baud rate to the time constant is given below while Table 5 shows the time constants associated with a number of popular baud rates when using the standard MPAP-200 9.8304 MHz clock.

$$Time_Const = \frac{Clock_Frequency}{2 \times baud_Rate \times Clock_Mode} - 2$$

Where: Clock_Frequency = 9.8304 x 10⁶
Clock_Mode = 1, 16, 32, or 64
Baud_Rate = desired baud rate

Baud Rate	Time Constant	
38400	126	007E (hex)
19200	254	00FE (hex)
9600	510	01FE (hex)
4800	1022	03FE (hex)
2400	2046	07FE (hex)
1200	4094	0FFE (hex)
600	8190	1FFE (hex)
300	16382	3FFE (hex)

(for Clock_Frequency = 9.8304 MHz)

Table 5 --- time constants for common baud rates

9.3 SCC Data Encoding Methods

The SCC provides four different data encoding methods, selected by bits 6 and 5 in WR10. These four include NRZ, NRZI, FM1 and FM0. The SCC also features a digital phase-locked loop (DPLL) that can be programmed to operate in NRZI or FM modes. Also, the SCC contains two features for diagnostic purposes, controlled by bits in WR14. They are local loopback and auto echo.

For further information on these subjects or any others involving the SCC contact Zilog for a complete technical manual.

9.4 Support for SCC Channel B

The MPAP-200 is a single-channel device. Portions of SCC channel B are used to augment channel A. Channel B cannot be used for transmit, but may be used for receive, subject to certain limitations.

9.4.1 Receive data and clock signals

The receive data signals RXDA and RXDB are tied together. The receive clock input signals RTXCA and RTXCB are also tied together. This can be useful in unusual applications. It would be possible to run the receiver and transmitter at different baud rates, using channel B's baud rate generator and receiver for the received data. Of course, the channel A transmitter and receiver can be run at different speeds simply by having external data clocks supplied to TRXCA and RTXCA from the cable.

The W/REQB signal is used to generate DMA requests between the SCC and the external FIFOs if channel B is used for receive.

9.4.2 Extra clock support for channel A

The TRXCB clock output can be routed back to RTXCA as another way to use the channel B baud rate generator to derive an independent clock for the channel A receiver. This is controlled by the RCKEN bit in the Communications Register (see page 34).

9.4.3 Extra handshaking for channel A

The SCC does not provide a DSR input for either channel. The MPAP-200 routes the DSR signal from the connector to the DCDB input of the SCC. Software can therefore use DCDB as a surrogate for DSR on channel A.

9.4.4 Other signals are not used

All channel B signals not listed above are not available at the connector. The CTSB and SYNCB inputs are tied to their inactive states. The TXDB, DTR/REQB, and RTSB outputs are left open.

9.5 SCC Incompatibility Warnings

Due to the SCC implementation used by the MPAP-200, there are two minor incompatibilities that the software programmer must avoid.

9.5.1 Register Pointer Bits

In a Zilog 85230, the control port register pointer bits can be set in either channel. With the implementation on the MPAP-200, however, both parts of an SCC control port access must use the same I/O address.

IMPORTANT

The programmer must be certain not to mix channel usage during the two-part access of SCC control ports. It would be highly irregular for code to be written in such fashion, so this restriction is not expected to be burdensome.

The following sequences will work:

Write Control Port A (set pointer bits for desired register)
Read or Write Control Port A (read or write desired channel A register)

Write Control Port B (set pointer bits for desired register)
Read or Write Control Port B (read or write desired channel B register)

The following sequences will NOT work:

Write Control Port A (set pointer bits for desired register)
Read or Write Control Port B (read or write desired channel B register)

Write Control Port B (set pointer bits for desired register)
Read or Write Control Port A (read or write desired channel A register)

9.5.2 Software Interrupt Acknowledge

The 85230's software interrupt acknowledge mechanism is not supported. Bit 5 of Write Register 9 (Software INTACK Enable) is forced to 0. Software must employ the "Interrupt Without Acknowledge" interrupt method using Read Registers 2 and 3 to process interrupts.

10 FIFO Operation

The MPAP-200 is equipped with 1024-byte external FIFOs in the transmit and receive data paths. These FIFOs are implemented as extensions of the SCC's small internal FIFOs. They have been designed to be as transparent as possible to the software operating the MPAP-200. By using these FIFOs, it is possible to achieve high data rates despite the MPAP-200 not supporting DMA.

The FIFOs are disabled by default after card insertion, power-up, or a socket reset.

10.1 Enabling and disabling the FIFOs

The FIFOs must be enabled or disabled as a pair. It is not possible to operate only the transmit FIFO or only the receive FIFO. The FIFOs are enabled by setting bit 2 of the Configuration Register to a logic 1. The FIFOs are disabled by clearing the same bit.

10.2 Accessing the FIFOs

When the FIFOs are enabled, they are accessed through either the channel A or channel B SCC Data Port address. Writing to Base+0 or Base+2 will cause a byte to be written into the transmit FIFO. Reading from Base+0 or Base+2 will cause a byte to be read from the receive FIFO.

The FIFOs cannot be accessed if they are disabled. If the FIFOs are disabled, reads or writes of the SCC Data Ports access the receive or transmit register of the appropriate SCC channel. Any control port writes of SCC write register 8 (transmit buffer) or control port reads of SCC read register 8 (receive buffer) directly access the SCC, whether the FIFOs are enabled or not.

10.2.1 Transmit FIFO

The transmit FIFO always services the transmitter of channel A of the SCC. If the FIFOs are enabled, an I/O write to either SCC Data Port (channel A or channel B) will write a byte to the transmit FIFO. If the FIFOs are not enabled, an I/O write to the SCC Data Port will instead write directly to the internal transmit buffer of the specified channel of the SCC.

10.2.2 Receive FIFO

The receive FIFO can service the receiver of either channel A or channel B of the SCC. If RXSRC (bit 1) of the Configuration Register (see page 36) is logic 1, the receive FIFO will service SCC channel B. If RXSRC is logic 0, the receive FIFO will service SCC channel A.

If the FIFOs are enabled, an I/O read from either SCC Data Port (channel A or channel B) will read a byte from the receive FIFO. If the FIFOs are not enabled, an I/O read from the SCC Data Port will instead read directly from the internal receive buffer of the specified channel of the SCC.

10.3 SCC configuration for FIFO operation

The interface between the SCC and the external FIFOs uses the SCC's DMA request functions. The SCC must therefore be configured for DMA operation in order to use the external FIFOs. In order to properly configure the SCC, certain bits in various SCC registers need to be set in a specific manner, as shown on the following pages.

Because the data transfer between the FIFOs and the SCC is controlled entirely by hardware, per-character transmit and receive interrupts should be disabled. Interrupts on transmit underruns and/or special receive conditions should usually be enabled so that end-of-frame conditions can be detected.

IMPORTANT

The DMA operation described in this section is between the SCC and the external FIFOs, and is handled entirely by the MPAP-200 hardware.

DMA is not supported between the MPAP-200 and the host computer due to the lack of DMA facilities on the PCMCIA bus.

The MPAP-200 is a single-channel device. Accordingly, most applications will use SCC channel A for both transmit and receive operations. It is possible, however, to use a limited portion of SCC channel B for receive operations (see page 23). The channel used for receive will determine how the SCC must be configured.

Do not enable the FIFOs until the SCC has been properly configured for DMA operation!

10.3.1 Using channel A for both transmit and receive

This is the mode in which most applications will run. Set RXSRC (bit 1) in the Configuration Register to logic 0. This will configure the MPAP-200 to use W/REQA for receive DMA and DTR/REQA for transmit DMA. In addition to any other desired SCC configuration, ensure that the following bits are set according to Table 6:

Register	Bit(s)	Value	Function
WR1A	7	1	Enable DMA request on W/REQA. This bit should be set after the other bits in WR1 are set as desired.
	6	1	Set W/REQA for DMA Request mode.
	5	1	Use W/REQA for receive.
	4-3	11 or 00	Enable receive interrupts on special conditions only (recommended), or disable them completely.
	1	0	Disable transmit interrupts.
WR14A	2	1	Enable DMA request-on-transmit on DTR/REQA.
WR15A	0	1	Enable WR7A'.
WR7A'	5	0	Assert transmit DMA request when entry location of internal FIFO is empty.
	4	1	Set DTR/REQA for W/REQA timing.

Table 6 --- Configuring the SCC for FIFO use with channel A only

10.3.2 Using channel B for receive

The MPAP-200 supplies only limited support for SCC channel B. This mode, therefore, is not recommended for most applications. Set RXSRC (bit 1) in the Configuration Register to logic 1. This will configure the MPAP-200 to use W/REQA for transmit DMA and W/REQB for receive DMA. In addition to any other desired SCC configuration, ensure that the following bits are set according to Table 7:

Register	Bit(s)	Value	Function
WR1A	7	1	Enable DMA request on W/REQA. This bit should be set after the other bits in WR1 are set as desired.
	6	1	Set W/REQA for DMA Request mode.
	5	0	Use W/REQA for transmit.
	1	0	Disable transmit interrupts.
WR14A	2	0	Disable DMA request-on-transmit on DTR/REQA.
WR15A	0	1	Enable WR7A'.
WR7A'	5	0	Assert transmit DMA request when entry location of internal FIFO is empty.
WR1B	7	1	Enable DMA request on W/REQB. This bit should be set after the other bits in WR1 are set as desired.
	6	1	Set W/REQB for DMA Request mode.
	5	1	Use W/REQB for receive.
	4-3	11 or 00	Enable receive interrupts on special conditions only (recommended), or disable them completely.

Table 7 --- Configuring the SCC for Rx DMA on channel B

10.4 FIFO status and control

Several registers are used to control the FIFOs and monitor their status. These registers are detailed in other chapters of this manual.

10.4.1 Interrupt status

Three interrupt statuses, listed in Table 8, can be generated by four events related to FIFO activity. In each case, a latched bit in the Interrupt Status Register is set to a logic 1 (see page 38). These bits are write-clear, meaning that software must write a 1 to a bit in order to clear it.

IMPORTANT

FIFO-related interrupts will occur only when the MPAP-200 interrupt source is set to INTSCC. See Table 10 on page 36 for details.

Event	Interrupt Status Register Bit	Comment
Transmit FIFO drained past the half-full mark	TX_FIFO (bit 1)	Software can write at least 512 bytes to the transmit FIFO.
Receive FIFO filled past the half-full mark	RX_FIFO (bit 2)	Software can read at least 512 bytes from the receive FIFO.
Receive data timeout with non-empty FIFO		Software can read bytes from the receive FIFO until the FIFO is empty.
Special receive pattern detected	RX_PAT (bit 3)	Software can read data from the receive FIFO as desired.

Table 8 --- FIFO-related interrupt statuses

IMPORTANT

Software can differentiate between the two types of RX_FIFO interrupts by examining the RXH bit in the FIFO Status Register. If RXH is clear (logic 0), the interrupt occurred because of a timeout.

10.4.2 Resetting the FIFOs

The FIFOs are automatically disabled and reset at powerup or when the MPAP-200 is inserted into a PCMCIA socket. The transmit and receive FIFOs can also be independently reset by setting and clearing the appropriate bits in the FIFO Control Register. Resetting a FIFO sets the appropriate FIFO empty status bit and resets the FIFO's internal read and write pointers. The SCC's internal FIFOs are not affected when the external FIFOs are reset.

The external FIFOs cannot be reset while they are enabled! FIFO reset commands will be ignored if the external FIFOs are enabled.

10.4.3 Reading current FIFO status

The FIFO Status Register is a read-only register which always indicates the current status of both the transmit and receive external FIFOs. Each FIFO can be checked for empty, full, and half-full (or more) status at any time. For details, see Table 12 on page 39.

10.4.4 Controlling the FIFOs

The FIFO Control Register is a read-write register which can be used to reset either or both the receive and transmit external FIFOs. Receive pattern detection and receive FIFO timeout modes are also controlled with this register. For details, see Table 13 on page 40.

10.5 Accessing the SCC while FIFOs are enabled

The SCC channel A and channel B control port registers are always accessible regardless of whether the external FIFOs are enabled or disabled. While the FIFOs are enabled, SCC data port accesses are redirected to the FIFOs. Access to the SCC's transmit or receive registers while the FIFOs are enabled is possible indirectly by using the control port and register 8. Any writes of SCC Write Register 8 (transmit buffer) or reads of SCC Read Register 8 (receive buffer) will bypass the external FIFOs.

10.6 Receive pattern detection

The external FIFOs are most useful in bit-synchronous operational modes because the SCC can generate a Special Condition interrupt when the closing flag of a bit-synchronous frame is received. This allows the SCC to run with per-character receive interrupts disabled while DMA transfers occur between the SCC and external FIFOs.

Byte-synchronous modes such as Bisync, however, do not benefit from such a hardware assist for detecting the end-of-frame condition. On the contrary, with byte-oriented protocols it is usually necessary to check each byte received against a table of special function codes (e.g. SYNC, PAD, SDI, STX, EDI, ETX, etc.) to determine where data and frames begin and end. Unless the frames are of a fixed length, it is therefore difficult to use DMA with

byte-synchronous modes. This would seem to preclude the use of the MPAP-200's external FIFOs with byte-oriented protocols.

To make the external FIFOs more useful in byte-synchronous modes, the MPAP-200 can watch for a given character to be transferred consecutively a specific number of times from the SCC into the receive FIFO. When this occurs, the RX_PAT bit in the Interrupt Status Register (see page 38) is set. For instance, the MPAP-200 can watch for the end-of-text character to be received, or for three consecutive pad characters to be received.

For byte-synchronous operation with simple unique markers in the data stream, this feature may be quite useful. Even if it is not, however, the MPAP-200 can certainly be operated with per-character interrupts enabled and the external FIFOs disabled. The tradeoff will be a heavier interrupt burden and possibly somewhat lower throughput.

NOTE

While most useful in byte-synchronous modes, the receive pattern detection feature can be used in any operational mode.

10.7 Receive FIFO timeout

With asynchronous operational modes, the same problem exists. Namely, how is one to determine when a reception is complete? While the receive pattern detection may be useful here, the MPAP-200 also offers a timeout feature on the external receive FIFO.

If the external FIFO is not empty and a time interval equal to a specified number of character-times has elapsed without any further data being received, a receive FIFO interrupt is generated and RX_FIFO bit in the Interrupt Status Register (see page 38) is set. A character-time is approximated by counting eight ticks of the bit clock.

To use this feature, the receive clock must be output on TRXCA. It can come from either an external source or from the channel A baud rate generator. While the RTXCA signal is typically used for a receive clock, it is not capable of being an output, so the TRXCA signal must be used instead. Depending on the application, this may force the transmit and receive clocks to be the same. For most asynchronous applications, this should not pose a problem.

- Bit 3: RCKEN --- Receive Clock Source:** When set (logic 1), this bit allows the receive clock (RCLK) signal to be generated by the TRxC pin on channel B of the SCC. When cleared (logic 0), RCLK is received on pins 17 and 9 of the DB-25 connector.
- Bit 2: TCKEN --- Transmit Clock Source:** When set (logic 1), this bit allows the transmit clock (TCLK) to be generated by the TRxC pin on channel A of the SCC and to be transmitted on pins 24 and 11 of the DB-25 connector. When cleared (logic 0), the DTE receives TCLK on pins 15 and 12 of the DB-25 connector.
- Bit 1: RXDEN --- Enable Receivers:** When set (logic 1), this bit enables the RS-422/485 receivers for data and handshake signals. When cleared (logic 0), the receivers are disabled.
- Bit 0: TXDEN --- Enable Transmitters:** When set (logic 1), this bit enables the RS-422/485 drivers for data and handshake signals. When cleared (logic 0), the drivers are disabled.

12 Configuration Register

The Configuration Register is used to set the interrupt source and enable the interface between the SCC and the external FIFOs. The address of this register is Base+5. Table 10 details the bit definitions of the register.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1	0	INTS1	INTS0	0	FIFOEN	RXSRC	0

Table 10 --- Configuration Register - Read/Write

Bit 7: **External Data FIFOs Present --- Reserved, always 1.** This bit can be used as an indicator that external data FIFOs are present. Other MPA-series products that are not equipped with external data FIFOs will return 0 in this bit location.

Bit 6: **Reserved, always 0.**

Bits 5-4: **INTS1, INTS0 --- Interrupt Source and Enable Bits:** These two bits determine the source of interrupts. The only valid source is interrupt from the SCC (INTSCC). Below is the mapping for these bits. Note that FIFO-related interrupts will occur only when INTSCC is chosen.

INTS1	INTS0	Interrupt Source
0	0	Interrupts disabled
0	0	reserved
1	0	INTSCC
1	1	reserved

Bit 3: **Reserved, always 0.**

Bit 2: **FIFOEN --- External data FIFO enable:** If this bit is set (logic 1), the external data FIFOs are enabled. If this bit is clear (logic 0), the external data FIFOs are disabled. (See page 25 for full details on FIFO use.)

Bit 1: **RXSRC --- Receive FIFO DMA Source:** This bit determines which SCC pins are used to control transmit and receive DMA transactions between the SCC and the external FIFOs (when enabled). The transmit data FIFO is always used with SCC channel A. The receive data FIFO may be used with SCC channel A by setting RXSRC to logic 0, or with SCC channel B by setting RXSRC to logic 1. (See page 23 for information on using channel B.)

	RXSRC = 0	RXSRC = 1
Receive DMA	W/REQA	W/REQB
Transmit DMA	DTR/REQA	W/REQA

Bit 0: **Reserved, always 0.**

13 Interrupt Status Register

The Interrupt Status Register is used to determine the cause of an interrupt generated by the MPAP-200. The address of this register is Base+8. Table 11 details the bit definitions of the register. **The interrupt source in the Configuration Register (see page 36) must be set to INTSCC for any of the statuses indicated by this register to occur.** This register can be ignored if the external FIFOs are not being used.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	RX_PAT	RX_FIFO	TX_FIFO	SCC

Table 11 --- Interrupt Status Register - Read Only/Write Clear

Bits 7-4: **Reserved, always 0.**

Bit 3: **RX_PAT --- Receive Pattern Interrupt:** The receive pattern interrupt occurs when the character set in the Receive Pattern Character Register is detected 'n' consecutive times in the received data stream, where 'n' is the value set in the Receive Pattern Count Register. This bit is set (logic 1) to indicate the interrupt. It remains set until cleared by writing a '1' to this bit.

Bit 2: **RX_FIFO --- Receive FIFO Interrupt:** The receive FIFO interrupt occurs when the number of bytes held in the external receive FIFO rises above the half-full mark, or when a receive FIFO timeout occurs. This bit is set (logic 1) to indicate the interrupt. It remains set until cleared by writing a '1' to this bit.

Bit 1: **TX_FIFO --- Transmit FIFO Interrupt:** The transmit FIFO interrupt occurs when the number of bytes held in the external transmit FIFO falls below the half-full mark. This bit is set (logic 1) to indicate the interrupt. It remains set until cleared by writing a '1' to this bit.

Bit 0: **SCC --- SCC Interrupt:** If this bit is set (logic 1), the SCC has generated an interrupt. Software should clear the interrupt condition by performing appropriate service on the SCC. This bit is not latched.

14 FIFO Status Register

The FIFO Status Register is used to return current status information about the external FIFOs. The address of this read-only register is Base+9. Table 12 details the bit definitions of the register. This register can be ignored if the external FIFOs are not being used.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	RXF	RXH	RXE	0	TXF	TXH	TXE

Table 12 --- FIFO Status Register - Read Only

Bit 7: Reserved, always 0.

Bit 6:	RXF --- Receive FIFO Full:	This
	bit is set (logic 1) when the external receive FIFO is completely full. The FIFO	
	will accept no more data from the SCC.	

Bit 5:	RXH --- Receive FIFO Half Full:	This
	bit is set (logic 1) while the external receive FIFO is at least half-full.	

Bit 4: RXE --- Receive FIFO Empty:
This bit is set (logic 1) when the external receive FIFO is completely empty.

Bit 3: Reserved, always 0.

Bit 2: TXF --- Transmit FIFO Full:
This bit is set (logic 1) when the external transmit FIFO is completely full. Further writes to the external transmit FIFO will be ignored.

Bit 1:	TXH --- Transmit FIFO Half Full:	This
	bit is set (logic 1) while the external transmit FIFO is at least half-full.	

Bit 0: TXE --- Transmit FIFO Empty:
This bit is set (logic 1) when the external transmit FIFO is completely empty.

16 Receive Pattern Character Register

The Receive Pattern Character Register is used to set the character value to be used in receive pattern detection. The address of this register is Base+B (hex). This register can be ignored if the external FIFOs are not being used.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
character value (0-255)							

Table 14 --- Receive Pattern Character Register - Read/Write

Bits 7-0: **Receive Pattern Character:** This is
the numeric value of the character to be detected. See page 32 for details on the
receive character pattern detection feature.

17 Receive Pattern Count Register

The Receive Pattern Count Register is used to set the counter value to be used in receive pattern detection. The address of this register is Base+C (hex). This register can be ignored if the external FIFOs are not being used.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
counter value (0-255)							

Table 15 --- Receive Pattern Count Register - Read/Write

Bits 7-0: Receive Pattern Count:

This value is the number of times that the character stored in the Receive Pattern Character Register (see page 41) must be consecutively detected for the receive character pattern detect interrupt to be generated. See page 32 for details on the receive character pattern detection feature.

18 Receive FIFO Timeout Register

The Receive FIFO Timeout Register is used to control the operation of the external receive FIFO timeout feature. The address of this register is Base+D (hex). This register can be ignored if the external FIFOs are not being used. See page 33 for details on the receive FIFO timeout feature.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
X16_MODE	0	timeout interval (0-63)					

Table 16 --- Receive FIFO Timeout Register - Read/Write

- Bit 7:** **X16_MODE --- Clock Mode:**
If this bit is set (logic 1), the data clock is divided by 16 (prescaled) before it is fed to the timeout circuitry. This is useful for asynchronous operation. If this bit is clear (logic 0), the data clock is not prescaled.
- Bit 6:** **Reserved, always 0.**
- Bits 5-0:** **Timeout Interval:**
This is the number of character-times that must elapse before a non-empty external receive FIFO will trigger a timeout condition. This interval assumes eight bits per character, so it will be an approximation for modes running at settings other than eight bits per character.

19 External Connections

The MPAP-200 is configured as a Data Terminal Equipment (DTE) device using a DB-25 male connector. There is no DCE version available.

The control signals the DTE can generate are Request To Send (RTS) and Data Terminal Ready (DTR). It can receive the signals Carrier Detect (DCD), Clear to Send (CTS), and Data Set Ready (DSR). All the control signals are controlled through channel A of the SCC, with the exception of the DSR signal, which is received on the DCDB pin on channel B. (The SCC has no actual DSR inputs.)

The transmit clock (TCLK, SCC TRxCA pin) can be transmitted on TTCLK or received on RTCLK, depending on TCKEN. The receive clock (RCLK, SCC RTxC pins) can be received on RRCLK or can be generated using the TRxCB pin, depending on RCKEN. The receive clock cannot be transmitted. TCLK and RCLK can also be internally sourced from the channel A baud rate generator.

Figure 1 shows the DTE clock configuration. On the left are the SCC clock pins and the clock enable bits from the Communications Register. On the right are the signals at the DB-25 connector.

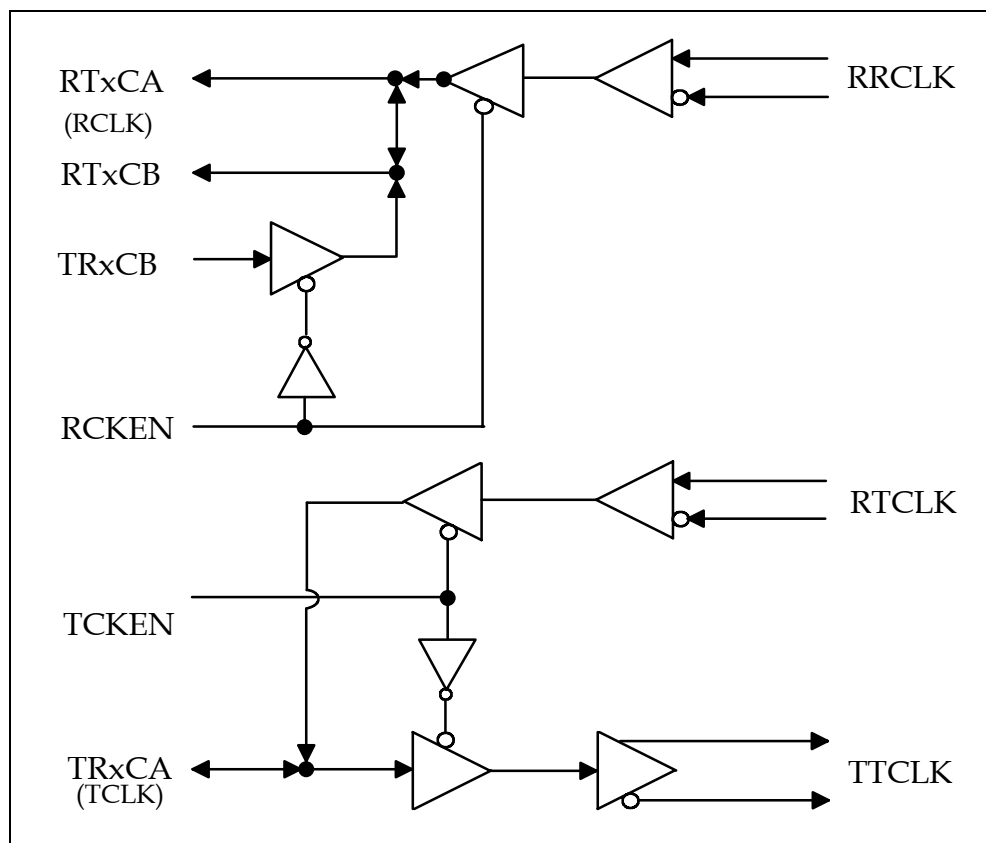


Figure 1 --- MPAP-200 Clock Configuration

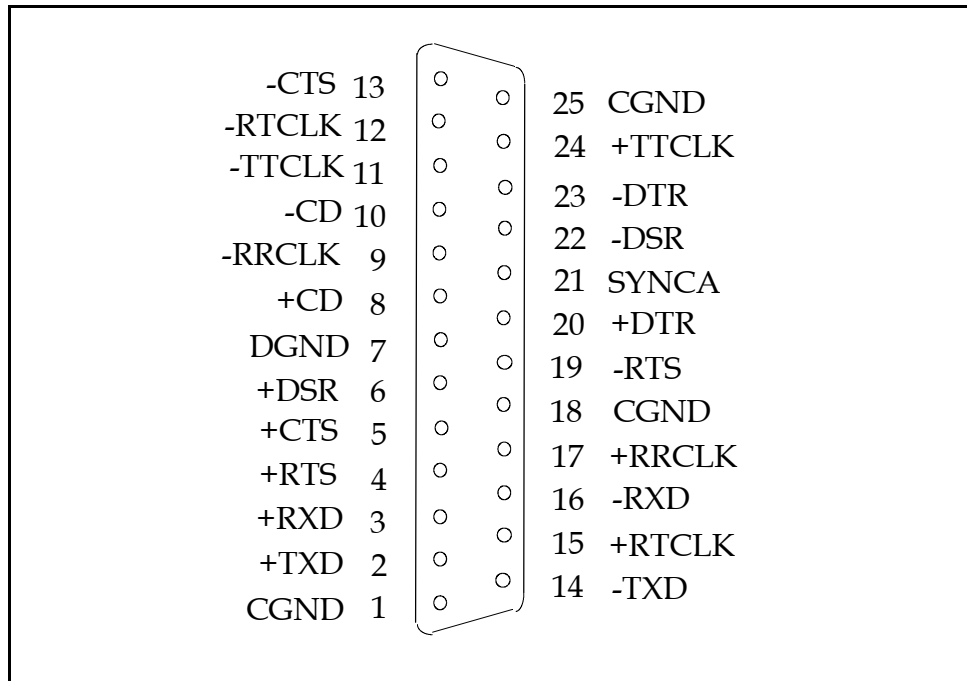


Figure 2 --- MPAP-200 Output Connector Pinout

19.1 SYNCA (pin 21)

If EXTSYNC (bit 6) in the Communications Register is set to a logic 1, the SYNCA signal from the connector is used to drive the active-low SYNC input of SCC channel A. **This is a single-ended input**, inverted by the receiver, so a +5 volt signal on pin 21 will assert SYNCA (a -5 volt signal will deassert SYNCA). The SCC must be specifically programmed to recognize external synchronization.

19.2 MPA-200 and EIA-530 Compatibility

The MPAP-200 is designed to be functionally-compatible with Qatech's MPA-200 DTE adapter for the ISA bus. The MPAP-200 connector pinout varies slightly from that of the MPA-200, with the local and remote loopback output signals (LL and RL) and the test mode input signal (TM) replaced with a SYNCA input and two ground conductors.

If the MPAP-200 is to be connected to an EIA-530 device, it may be necessary to swap the +/- conductors on the TXD and RXD signals.

Table 17 shows the pin configuration of the MPAP-200 DTE connector. The definitions of the interchange circuits can be found starting on page 47.

Pin	To DTE	From DTE	Signal	Circuit	SCC Pin or Register Bit
1			CGND		
2		X	+TXD	BA	TxDA pin
3	X		+RXD	BB	RxDA pin
4		X	+RTS	CA	RTSA pin
5	X		+CTS	CB	CTSA pin
6	X		+DSR	CC	DCDB pin
7			DGND	AB	
8	X		+CD	CF	DCDA pin
9	X		-RRCLK	DD	RTxC pins
10	X		-CD	CF	DCDA pin
11		X	-TTCLK	DA	TRxCA pin
12	X		-RTCLK	DB	TRxCA pin
13	X		-CTS	CB	CTSA pin
14		X	-TXD	BA	TxDA pin
15	X		+RTCLK	DB	TRxCA pin
16	X		-RXD	BB	RxDA pin
17	X		+RRCLK	DD	RTxC pins
18			CGND		
19		X	-RTS	CA	RTSA pin
20		X	+DTR	CD	DTR/REQA pin
21	X		SYNCA		SYNCA pin
22	X		-DSR	CC	DCDB pin
23		X	-DTR	CD	DTR/REQA pin
24		X	+TTCLK	DA	TRxCA pin
25			CGND		

Table 17 --- Connector Pin Definitions

19.3 Null-modem cables

The MPAP-200 does not use a standard asynchronous PC serial port connector pinout. Typical off-the-shelf null-modem cables cannot be used with this card!

20 DTE Interface Signals

CIRCUIT AB - SIGNAL GROUND

- CONNECTOR NOTATION: DGND
- DIRECTION: Not applicable

This conductor directly connects the DTE circuit ground to the DCE circuit ground.

CIRCUIT BA - TRANSMITTED DATA

- CONNECTOR NOTATION: +TXD, -TXD
- DIRECTION: To DCE

This signal transfers the data generated by the DTE through the communication channel to one or more remote DCE data stations.

CIRCUIT BB - RECEIVED DATA

- CONNECTOR NOTATION: +RXD, -RXD
- DIRECTION: From DCE

This signal transfers the data generated by the DCE, in response to data channel line signals received from a remote DTE data station, to the DTE.

CIRCUIT CA - REQUEST TO SEND

- CONNECTOR NOTATION: +RTS, -RTS
- DIRECTION: To DCE

This signal controls the data channel transmit function of the local DCE and, on a half-duplex channel, the direction of the data transmission of the local DCE.

CIRCUIT CB - CLEAR TO SEND

- CONNECTOR NOTATION: +CTS, -CTS
- DIRECTION: From DCE

This signal indicates to the DTE whether the DCE is conditioned to transmit data on the communication channel.

CIRCUIT CC - DCE Ready (Data Set READY)

- CONNECTOR NOTATION: +DSR, -DSR
- DIRECTION: From DCE

This signal indicates the status of the local DCE by reporting to the DTE device that a communication channel has been established.

CIRCUIT CD - DTE READY (Data Terminal Ready)

- CONNECTOR NOTATION: +DTR, -DTR

- DIRECTION: To DCE

This signal controls the switching of the DCE to the communication channel. The DTE will generate this signal to prepare the DCE to be connected to or removed from the communication channel.

CIRCUIT CF - Received Line Signal Detect (CARRIER DETECT)

- CONNECTOR NOTATION: +CD, -CD
- DIRECTION: From DCE

This signal indicates to the DTE whether the DCE is conditioned to receive data from the communication channel, but does not indicate the relative quality of the data signals being received.

CIRCUIT DA - TRANSMIT Signal ELEMENT TIMING (DTE Source)

- CONNECTOR NOTATION: +TTCLK, -TTCLK
- DIRECTION: To DCE

This signal, generated by the DTE, provides the DCE with element timing information pertaining to the data transmitted by the DTE. The DCE can use this information for its received data.

CIRCUIT DB - TRANSMIT Signal ELEMENT TIMING (DCE Source)

- CONNECTOR NOTATION: +RTCLK, -RTCLK
- DIRECTION: From DCE

This signal, generated by the DCE, provides the DTE with element timing information pertaining to the data transmitted to the DCE. The DCE can use this information for its received data.

CIRCUIT DD - RECEIVER Signal ELEMENT TIMING (DCE Source)

- CONNECTOR NOTATION: +RRCLK, -RRCLK
- DIRECTION: From DCE

This signal, generated by the DCE, provides the DTE with element timing information pertaining to the data transmitted by the DCE. The DTE can use this information for its received data.

21 Specifications

Bus interface:	PCMCIA PC Card Standard 2.1
Physical Dimensions:	Type II (5 mm) PCMCIA card
Controller:	85230-compatible 16-MHz Serial Communications Controller (SCC)
DTE Interface:	Male D-25 connector
Transmit drivers:	RS-422/485 compatible, 5 Mbps typical maximum data rate
Receive buffers:	RS-422/485 compatible, 5 Mbps typical maximum data rate
I/O Address range:	Sixteen-byte contiguous range required, determined by PCMCIA system
Interrupt levels:	One IRQ required, determined by PCMCIA system
DMA channels:	Not supported by PCMCIA 2.1 bus
Power requirements:	100 mA at +5 volts, typical

22 Software Troubleshooting

This appendix discusses how to resolve some common problems sometimes encountered when using the MPAP-200 configuration software.

22.1 DOS Client Driver

22.1.1 Generic "SuperClient" Drivers

Many Card and Socket Services packages include a generic client driver (or SuperClient) which configures standard I/O devices such as serial ports or modems. If one of these generic client drivers is installed, it may try to configure the MPAP-200 causing the MPAP-200 client driver to fail installation. In these cases, the user should do one of the following:

1. Place the MPAP-200 client driver above the generic client driver in the CONFIG.SYS.
2. Configure the generic client driver to disable configuration of nonstandard I/O cards. Consult the Card and Socket Services documentation for availability and details of this feature.

22.1.2 Lack of Available Resources

One function of the Card and Socket Services software is to track which system resources (memory addresses, I/O addresses, IRQs, etc.) are available for assignment to inserted PCMCIA cards. Occasionally, Card Services may incorrectly determine that a particular resource is free when it is actually in use or vice-versa. Most DOS-based Card and Socket Services generate a resource table in a file (typically in the form of an .INI file) which the user can modify to adjust the available system resources.

22.1.3 Multiple Configuration Attempts

Some Card and Socket Services have a setting which aborts the configuration process after a single configuration failure (such as a request for an unavailable resource). The user should change this setting to allow for multiple configuration attempts.

22.1.4 Older Versions of Card and Socket Services

Often, older versions of Card and Socket Services (with copyright date of 1993 and before) don't work correctly with I/O cards such as the MPAP-200. An up-to-date version of Card and Socket Services should be obtained by contacting Quatech, Inc.

22.2 DOS Enabler

22.2.1 With Card and Socket Services

The enabler should NOT be used if any Card and Socket Services are present on the system. If Card and Socket Services is installed, the enabler may interfere with its operation and with the device(s) it controls. The client driver should be used to configure the MPAP-200 if Card and Socket Services are installed.

22.2.2 Socket Numbers

The enabler requires the socket number to be specified on the command line. Some vendors number their sockets beginning with 1 while other vendors number their sockets beginning with 0. The enabler considers the first socket in the system to be socket 0.

22.2.3 Memory range exclusion

The enabler requires a region of high DOS memory. This region is 1000h bytes (4 KB) long and by default begins at address D0000H (the address may be changed using the "W" parameter). If a memory manager such as EMM386, QEMM, or 386Max is installed on the system, this region of DOS memory must be excluded from the memory manager's control. Consult the documentation provided with the memory manager software for instructions on how to exclude this memory region.

Some systems use the high memory area for BIOS shadowing to improve overall system performance. In order for the enabler to operate, BIOS shadowing must be disabled in the address range specified for the configuration window. BIOS shadowing can usually be disabled through the system's CMOS setup utility.

22.3 OS/2 Client Driver

22.3.1 Resources Not Available

It is the user's responsibility to ensure the I/O address and IRQ resources are available. For OS/2 Warp users, the RMVIEW utility may be useful in finding resource conflicts. Type "rmview /?" at an OS/2 command prompt for details. On OS/2 Warp 4.0, the Hardware Manager object in the System Setup folder provides a graphical view of the same information.

22.3.2 Insufficient Number Of Command Line Arguments

The MPAP-200 command line must contain at least one command line argument for each MPAP-200 to be installed.

22.3.3 Bad Parameters

The base address or IRQ value may be out of range. Make sure that the base address is a hexadecimal number between 100 hex and 3F0 hex ending in 0. Make sure that the IRQ is a decimal number between 2 and 15.

MPAP-200 User's Manual
Revision 2.32
March 2004
P/N 940-0129-232